



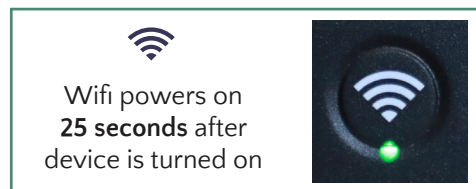


- 1 Power Button
- 2 MicroSD Lock/Unlock Button
- 3 Power Indicator - On
- 4 Battery Level Indicator
- 5 Charging Indicator
- 6 Wifi Status Indicator
- 7 Number of Wifi Users
- 8 MicroSD Copying Progress
- 9 MicroSD Lock/Unlock Indicator
- 10 Wifi Antenna Connector (Optional)
- 11 Micro USB Input (Charging Device)
- 12 MicroSD Port
- 13 USB Power Output (For Charging Other Devices)



POWER ON/OFF

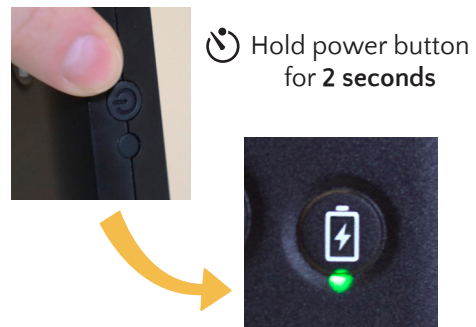

To power Wifi on/off, hold SD lock button for 2 seconds

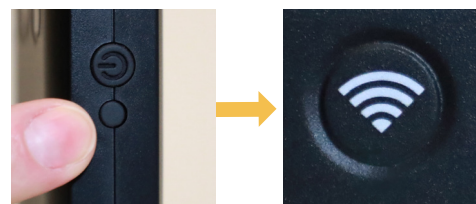

CONNECT TO WIFI

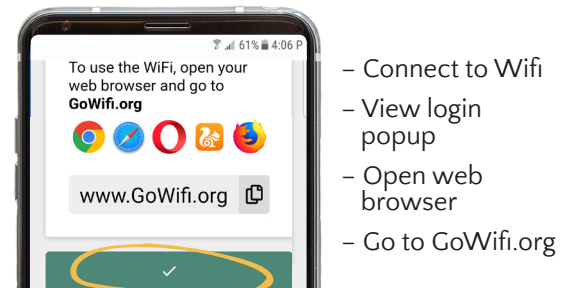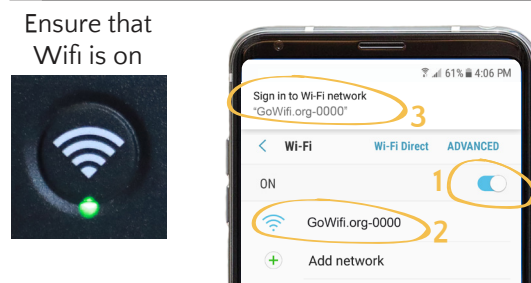


Model: RWOLSPv1
Input: DC 5V / 1.9A
Output: DC 5V / 500mA
Capacity: 5200mAh / 19.24Wh

FC CE RoHS 
MADE IN CHINA


Warning: Batteries should not be exposed to excessive heat such as sunshine or fire.

CHARGE BATTERY


Tap power button for battery level

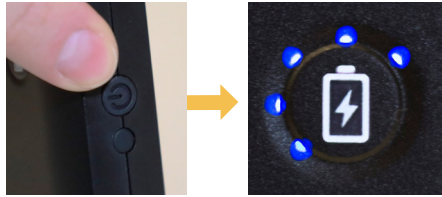

To Charge a Phone: Plug the phone into the USB port and tap the power button.

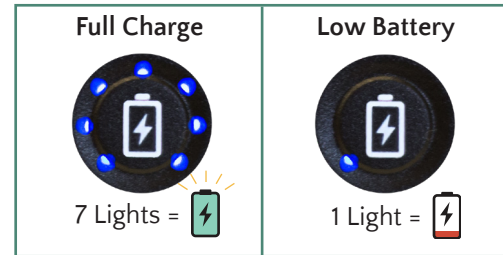


Charge Time = About 5 hours
Runtime = 12 hours

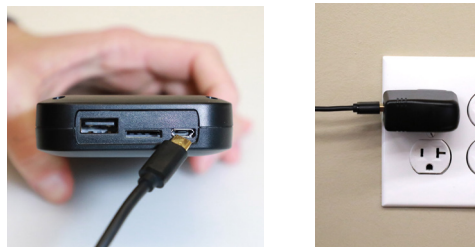


MICRO SD COPYING

Lights flash to show progress

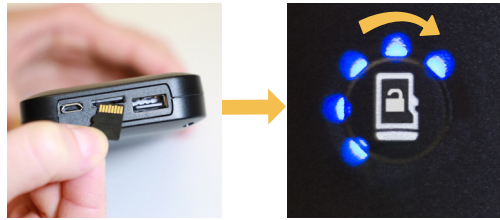


Green SD Light = Safe to remove SD card

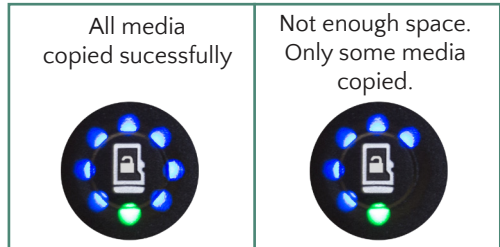


To lock or unlock SD card, quickly press SD lock button.

Button can be disabled in admin settings.

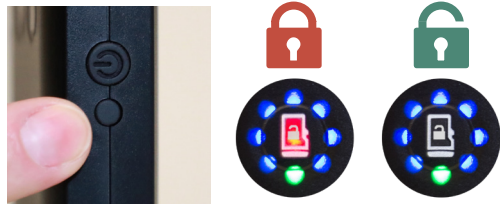

MANAGE MEDIA & SETTINGS



Ensure that Wifi is on

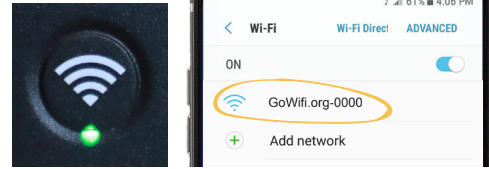

In web browser, navigate to
(By Default):

url: GoWifi.org/admin

Username: admin Password: admin

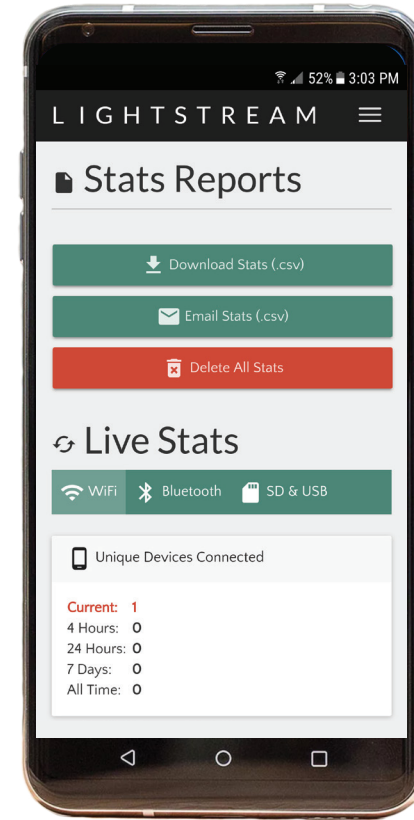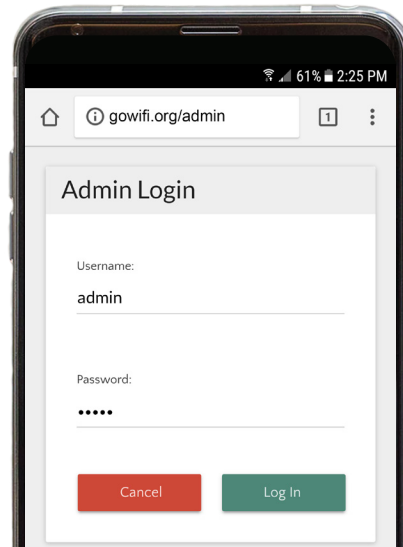

LIGHTSTREAM
POCKET

QUICK START

RENEWWORLDOUTREACH
RENEWOUTREACH.ORG